



247INK TECHNICAL SHEET

REFILL INSTRUCTIONS

Please read these instructions carefully before using your Inkjet Cartridge Refill Kit. Select the model of your printer from one of the pages shown.

GENERAL INFORMATION

Cyan = Blue, Magenta = Red/Pink, Yellow = Yellow,

Light Cyan / Photo Cyan = Light Blue, Light Magenta / Photo Magenta = Light Red/Pink.

Our simple to use refill kit, if used correctly, should provide top quality printed output & give you HUGE SAVINGS over the cost of buying a new cartridge.

Before you start:

- Read the instructions carefully.
- Work over a sink or a surface covered in layers of newspaper (just in case).
- Only re-fill a cartridge that has just run out ~ generally, old dried out cartridges do not fill successfully.
- Even 30 minutes can ruin a cartridge if it dries out!
- Have your printer manual handy for instructions on inserting a “new” cartridge.
- Empty cartridges left for more than 2 days do not always give a successful refill.
- Always refill the cartridge as soon as the warning sign is shown.
- A leaking cartridge can damage your printer. Do not place a cartridge into your printer that is leaking.
- Change your cartridge after every 5 refills, if you do not, quality of printing will deteriorate noticeably.

THE SUPPLIER CANNOT BE HELD RESPONSIBLE FOR ANY DAMAGE CAUSED BY IMPROPER USE, OR FAILURE

PLEASE NOTE: Because of the lifecycle of inkjet printers and the speed with which manufacturers are bringing out new models, your printer/cartridge may not be listed. Please find the closest cartridge to yours and follow those instructions – for colour cartridges make sure you push a cocktail stick, cotton bud or something similar into the filling hole before injecting ink to determine which colour to inject. Injecting the wrong colour will render the cartridge useless!

KEEP OUT OF REACH OF CHILDREN AND PETS!



247INK TECHNICAL SHEET

TABLE OF CONTENTS

LEXMARK INKJET CARTRIDGES

<i>CARTRIDGE CODE</i>	<i>PAGE</i>
13400HC, 1380620, 1382050, 15M2971 (71), 17G0050 (50), 17G0055 (55)	3
12A1970, 12A1975, 12A1980, 12A1985 1361400, 1380619, 1380620, 13619HC, 13620HC, 1382060 15M0120, 15M0125 17G0060 (60), 17G0065 (65)	3
10N0016 (16), 10N0217 (17), 10N0227 (27)	4
10N0026 (26)	4
18C0031 (31), 18C0032 (32), 18C0033 (33), 18C0034 (34), 18C0035 (35)	5
18Y0143E (43), 18Y0144E (44)	5
18L0032 (82), 18L0042 (83)	6
12A1990, 1361760 - PHOTO	7
18C0781E (No.1) & 18C0190 (No.2)	8
BLACK: 18C1954E (4A), 18C2080E (14A), 18C1623E (23A), 18C1528E (28A), 18C2150E (36A), 18C2190E (36XLA), 18Y0342E (42A)	9
COLOUR: 18C1970E (5A), 18C2100E (15A), 18C1624E (24A), 18C1529E (29A), 18C2160E (37A), 18C2200E (37XLA), 18Y0341E (41A)	10
SHARP AJ 650B, AJ 650C	3
SHARP UX C70B	4
DELL JF333	5
DELL T0529, T0530	4
DELL 7Y743, 7Y745, T0601, T0602	6




247INK TECHNICAL SHEET

13400HC, 1380620, 1382050, 15M2971 (71), 17G0050 (50), 17G0055 (55)
SHARP AJ 650B

BLACK CARTRIDGE

1. If necessary, use the tools provided to enlarge the filling hole situated on the top of the cartridge.
2. Fill the syringe with approximately 20ml of black ink.
3. Push the syringe all the way into the filling hole and SLOWLY inject all the ink into the cartridge or until the reservoir is full.
4. Replace the cartridge and run 1 - 3 cleaning cycles as per printer instructions.
8. If necessary leave cartridge in printer for up to 24 hours. (This allows ink to flow to the print head).

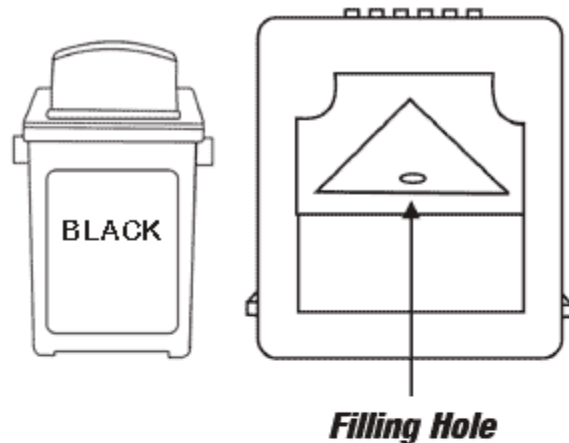


12A1970, 12A1975, 12A1980, 12A1985
1361400, 1380619, 1380620, 13619HC,
13620HC, 1382060
15M0120, 15M0125
17G0060 (60), 17G0065 (65)

SHARP AJ 650C

COLOUR CARTRIDGE

1. Locate the filler holes by removing the plastic top cover of the cartridge. You may need to pry this off using a thin metal blade. Ensure you do not damage the sensors on the back of the cartridge whilst doing this.
2. Using the picture, fill syringe with the corresponding colour ink.
3. Insert the syringe into the correct hole of the colour being filled and push all the way down. You will feel resistance as there is a sponge inside. Slowly inject approximately 8ml of ink until you can just see the ink surface on the top of the sponge, any more and it is over-filled. If this happens simply draw back on the syringe a little.
4. Rinse the syringe and needle thoroughly before proceeding then repeat the process for the other colours.
8. Re-attach the cover securely with adhesive tape and continue using the cartridge.

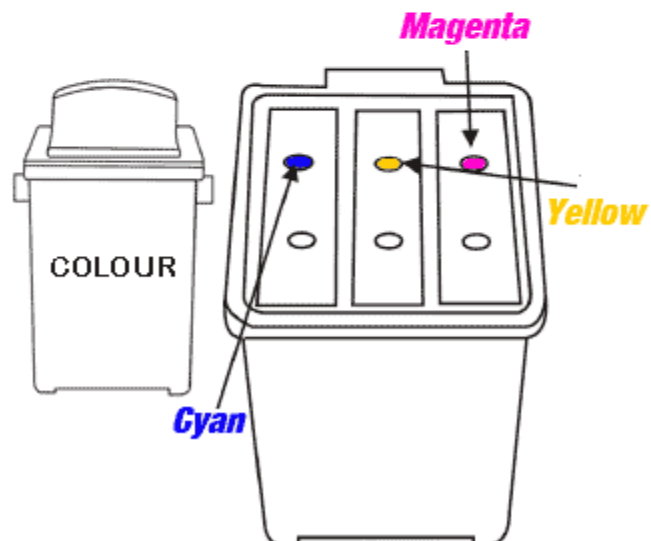

IMPORTANT – for best results, cartridge should be refilled whilst some ink remains
Empty cartridges should be refilled immediately.
This work is best done over the sink.




247INK TECHNICAL SHEET

10N0016 (16), 10N0217 (17), 10N0227 (27)

**SHARP UX C70B
DELL T0529**

BLACK CARTRIDGE

1. If necessary, use the tools provided to enlarge the filling hole situated on the top of the cartridge.
2. Fill the syringe with approximately 20ml of black ink.
3. Push the syringe all the way into the filling hole and **SLOWLY** inject all the ink into the cartridge or until the reservoir is full.
4. Replace the cartridge and run 1 - 3 cleaning cycles as per printer instructions.
8. If necessary leave cartridge in printer for up to 24 hours. (This allows ink to flow to the print head).

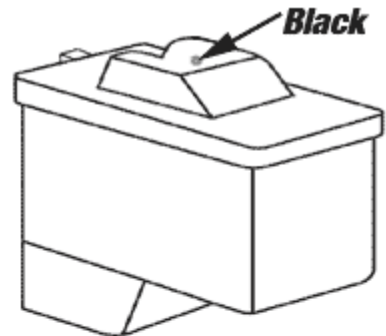


10N0026 (26)

DELL T0530

COLOUR CARTRIDGE

1. Locate the filler holes by removing the plastic top cover of the cartridge. You may need to pry this off using a thin metal blade. Ensure you do not damage the sensors on the back of the cartridge whilst doing this.
2. Using the picture, fill syringe with the corresponding colour ink.
3. Insert the syringe into the correct hole of the colour being filled and push all the way down. You will feel resistance as there is a sponge inside. Slowly inject approximately 8ml of ink until you can just see the ink surface on the top of the sponge, any more and it is over-filled. If this happens simply draw back on the syringe a little.
4. Rinse the syringe and needle thoroughly before proceeding then repeat the process for the other colours.
8. Re-attach the cover securely with adhesive tape and continue using the cartridge.

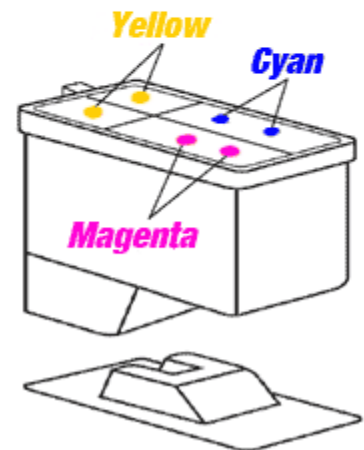

IMPORTANT – for best results, cartridge should be refilled whilst some ink remains
Empty cartridges should be refilled immediately.
This work is best done over the sink.



247INK TECHNICAL SHEET

18C0031 (31) - PHOTO

18C0032 (32), 18C0034 (34), 18Y0144E (44) - BLACK

18C0033 (33), 18C0035 (35), 18Y0143E (43) - COLOUR

DELL JF333 (COLOUR)


BLACK, COLOUR & PHOTO CARTRIDGES

In the picture shown, we have removed the label to help you identify where the filling holes are located. However we DO NOT RECOMMEND YOU DO THIS.

1. Attach the needle to the syringe and identify the placement of the correct hole for the colour you are filling based on the diagram right.
2. Once you have identified the correct filling hole for the colour and cartridge you are filling, push the needle through the label into the cartridge. You will feel some resistance due to the sponge inside, this is normal.
3. SLOWLY inject ink until the sponge is saturated (approximately 3ml ink).
4. Use adhesive tape to seal up the hole made in the cartridge label before continuing with other colours to avoid contamination.
NOTE: The cartridge will leak if this is not done.
5. Once done, thoroughly rinse the syringe before using with any other colour inks.
6. Reinstall cartridge and run 1-3 test pages as per manufacturers instructions.

IMPORTANT

We recommend refilling prior to the cartridge becoming empty. Empty cartridges should be refilled immediately. This work is best done over the sink.

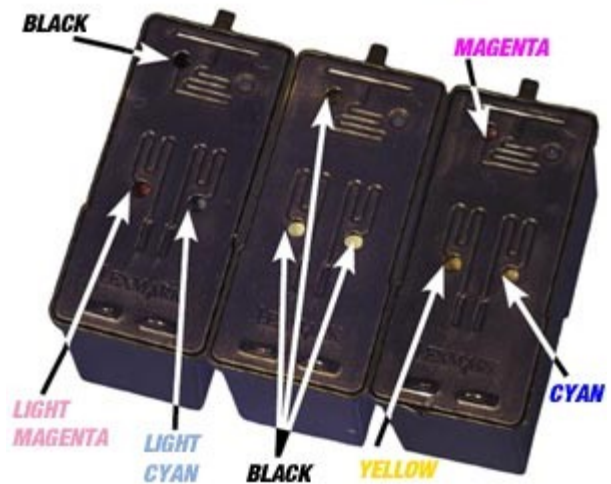




247INK TECHNICAL SHEET

18L0032 (82)

DELL 7Y743, T0601

BLACK CARTRIDGE

1. If necessary, use the tools provided to enlarge the filling hole situated on the top of the cartridge.
2. Fill the syringe with approximately 20ml of black ink.
3. Push the syringe all the way into the filling hole and SLOWLY inject all the ink into the cartridge or until the reservoir is full.
4. Replace the cartridge and run 1 - 3 cleaning cycles as per printer instructions.
8. If necessary leave cartridge in printer for up to 24 hours. (This allows ink to flow to the print head).

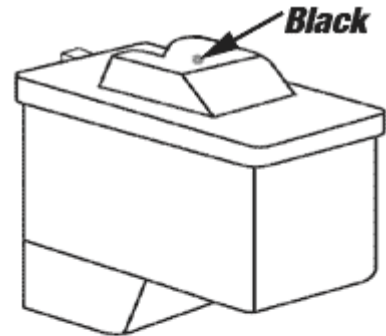


18L0042 (83)

DELL 7Y745, T0602

COLOUR CARTRIDGE

1. Locate the filler holes by removing the plastic top cover of the cartridge. You may need to pry this off using a thin metal blade. Ensure you do not damage the sensors on the back of the cartridge whilst doing this.
2. Using the picture, fill syringe with the corresponding colour ink.
3. Insert the syringe into the correct hole of the colour being filled and push all the way down. You will feel resistance as there is a sponge inside. Slowly inject approximately 8ml of ink until you can just see the ink surface on the top of the sponge, any more and it is over-filled. If this happens simply draw back on the syringe a little.
4. Rinse the syringe and needle thoroughly before proceeding then repeat the process for the other colours.
8. Re-attach the cover securely with adhesive tape and continue using the cartridge.

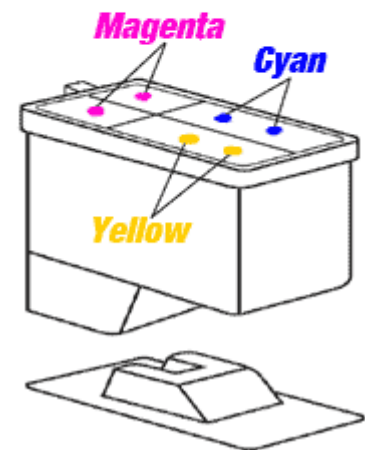

IMPORTANT – for best results, cartridge should be refilled whilst some ink remains
Empty cartridges should be refilled immediately.
This work is best done over the sink.



247INK TECHNICAL SHEET

12A1990, 1361760

PHOTO CARTRIDGE

1. Locate the filler holes by removing the plastic top cover of the cartridge. You may need to pry this off using a thin metal blade. Ensure you do not damage the sensors on the back of the cartridge whilst doing this.


2. Using the picture, fill syringe with the corresponding colour ink.

3. Insert the syringe into the correct hole of the colour being filled and push all the way down. You will feel resistance as there is a sponge inside. Slowly inject approximately 8ml of ink until you can just see the ink surface on the top of the sponge, any more and it is over-filled. If this happens simply draw back on the syringe a little.

4. Rinse the syringe and needle thoroughly before proceeding then repeat the process for the other colours.

8. Re-attach the cover securely with adhesive tape and continue using the cartridge.

IMPORTANT – for best results, cartridge should be refilled whilst some ink remains
Empty cartridges should be refilled immediately.
This work is best done over the sink.

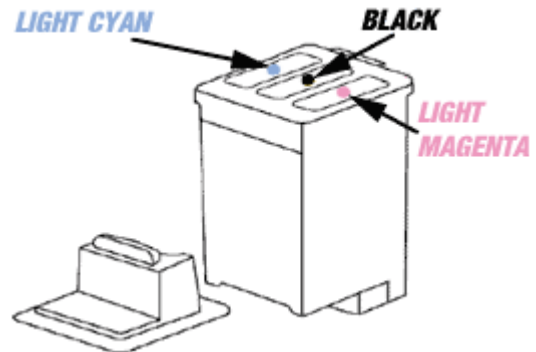




247INK TECHNICAL SHEET

18C0781E (No.1) & 18C0190 (No.2) - Same instructions for both.

1. Put the Ink Cartridge on some paper towels or Newspaper in an area where you can tolerate a spill.
2. Peel off the top label.
3. Follow the canal trace from the edge of the label to the very small hole at the end of the canal. This hole is big enough for a human hair to go through but not a syringe needle.
4. CAREFULLY make all three holes (Cyan, Magenta, and Yellow) larger with a small drill/screw or something similar.
5. Fill the syringe with 7 ml. of the CORRECT colour ink.
6. Very CAREFULLY inject ink into each chamber until the sponge is full. A little ink might come out of the top when full, so cover up the other two holes while filling one.
7. When finished, replace the top label with some adhesive tape.
8. Replace the cartridge and run 1 - 3 cleaning cycles as per printer instructions.

If necessary leave cartridge in printer for up to 8 hours.

**** NOTE** The cartridge will print just like a new one. Even though the cartridge prints fine, the ink level gauge will not read full after a refill.**

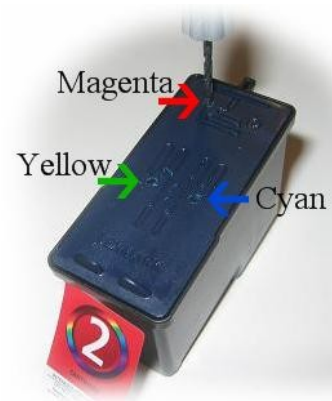



247INK TECHNICAL SHEET

18C1954E (4A), 18C2080E (14A), 18C1623E (23A), 18C1528E (28A), 18C2150E (36A), 18C2190E (36XLA), 18Y0342E (42A) – BLACK

BLACK CARTRIDGES

- Lexmark offers for sale two different versions of these cartridges.
- The regular versions are not refillable. They are "Return Program" cartridges. In theory, when you buy these cartridges you agree to return the empty cartridge to Lexmark. In return, Lexmark gives you a discounted price.
- The "A" versions (listed above) can be refilled. However, the price of these is higher than the regular version, so most people unknowingly buy the regular version.



IMPORTANT: If you want to refill, you need "A" version cartridges.

1. Put the Ink Cartridge on some paper towels or Newspaper in an area where you can tolerate a spill.
2. Peel off the top label, taking note of the tiny vent holes visible at the label edges.
3. CAREFULLY make the filling hole shown in the diagram above larger with a small drill/screw or something similar.
4. Fill the syringe with 15ml of black ink (the Hi-Capacity36XLA will take 30-35ml).
5. Very CAREFULLY inject ink into the chamber.
6. When finished, carefully replace the top label in the position it was in originally, or use some adhesive tape. Make sure the vent holes are still visible as they were when the label was in its original position.
7. Replace the cartridge (as a new cartridge if the software asks) and run 1 - 3 cleaning cycles as per printer instructions.

IMPORTANT

We recommend refilling prior to the cartridge becoming empty.

Empty cartridges should be refilled immediately.

This work is best done over the sink.



247INK TECHNICAL SHEET

18C1970E (5A), 18C2100E (15A), 18C1624E (24A), 18C1529E (29A), 18C2160E (37A), 18C2200E (37XLA), 18Y0341E (41A) - COLOUR

COLOUR CARTRIDGES

- Lexmark offers for sale two different versions of these cartridges.
- The regular versions are not refillable. They are "Return Program" cartridges. In theory, when you buy these cartridges you agree to return the empty cartridge to Lexmark. In return, Lexmark gives you a discounted price.
- The "A" versions (listed above) can be refilled. However, the price of these is higher than the regular version, so most people unknowingly buy the regular version.



IMPORTANT: If you want to refill, you need "A" version cartridges.

1. Put the Ink Cartridge on some paper towels or Newspaper in an area where you can tolerate a spill.
2. Peel off the top label, taking note of the tiny vent holes visible at the label edges.
3. CAREFULLY make all three holes shown in the diagram above (Cyan, Magenta, and Yellow) larger with a small drill/screw or something similar.
4. Fill the syringe with 7ml of the CORRECT colour ink for the chamber you are filling (the Hi-Capacity 37XLA will take approx 15ml of each colour).
5. Very CAREFULLY inject ink into each chamber until the sponge is full. A little ink might come out of the top when full, so cover up the other two holes while filling one.
6. When finished, carefully replace the top label in the position it was in originally, or use some adhesive tape. Make sure the vent holes are still visible as they were when the label was in its original position.
7. Replace the cartridge (as a new cartridge if the software asks) and run 1 - 3 cleaning cycles as per printer instructions.

IMPORTANT

We recommend refilling prior to the cartridge becoming empty.
Empty cartridges should be refilled immediately.
This work is best done over the sink.