


Refill Instructions - Lexmark COLOUR & PHOTO

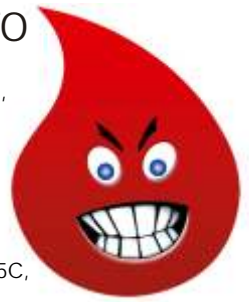

Lexmark: 150C, 1000, 1020 1100, 2030, 2050, 2055, 2070, 3000, 3100, 3200, 4076, 5000, 5700, 5770, 7000, 7200, 7200v, X63, X70, X73, X80, X83, X84, X85, X85 Pro, X125, X4250, X4270, Z11, Z12, Z22, Z31, Z32, Z42, Z43, Z44, Z45, Z45se, Z51, Z52, Z53, Z54, Z54se, Z82, Z700, Z703, Z705, Z706, Z708, Z715, F4270, P700, P704, P706, P707, P3120, P3140, P3150.

Optracolor: 40, 45.

Medley: 4c, 4x, 4sx. Execjet: II, IIC. OKI: 2010. Compaq Smartjet: C20, Ij200

IJ600, 300, 600, 700, 900, 1200, Xerox: 365, 365c, 470, 470cx, 480cx, 490, 570, 155C, XJ8C, XJ9C, XK35, XK-35c, XK-50, XK-50cx, C20, CW470, NC-20,

XI-470. Canon 710, Brother: 810, 840 BT: 50, 55, 60, 65, 300 SharpWinWrite: 100, 150C, Samsung.

1. The filler holes are located under the coloured top of the cartridge. This top needs to be removed before filling. Use a penknife or Stanley knife to break the seal by carefully scoring around all four edges of seal. (Colour & Photo cartridge only)

2. Assemble syringe and steel filling tube and fill with appropriate colour ink.

3. Insert the steel filling tube into the appropriate filling hole. (See diagram).

Push downwards into the centre of the sponge.

IMPORTANT: Cartridge contains a sponge and a slight resistance may be felt.

4. **SLOWLY** inject ink. When ink overflows from filling hole or starts to leak from print heads, cartridge is full. Stop injecting immediately. Blot printer head with tissue before continuing to fill next colour.

IMPORTANT: Clean syringe with water and dry before refilling next colour.

5. After refilling reseal the top. The best way to secure the top is to stick tape from one side, over the top and down the opposite side.

6. Leave cartridge to stand overnight on a protective, non-absorbent surface, this will ensure no leakage and give the ink time to fully saturate the sponge.

IMPORTANT: DO NOT LEAVE ON TISSUE.

7. Install cartridge and run a priming cycle.

(When installing the cartridge the printer may ask if the cartridge is a NEW or OLD cartridge. click on NEW to reset the printer)

IMPORTANT: For best results, refill whilst ink still remains in cartridge.

Empty cartridges should be refilled immediately.



ORDER REFILLS @
www.refill4.com