


Refill Instructions

Lexmark No.50 (17G0050)

Lexmark: 150C, 1000, 1020 1100, 2030, 2050, 2055, 2070, 3000, 3100, 3200, 4076, 5000, 5700, 5770, 7000, 7200, 7200v, X63, X70, X73, X80, X83, X84, X85, X85 Pro, X125, X4250, X4270, Z11, Z12, Z22, Z31, Z32, Z42, Z43, Z44, Z45, Z45se, Z51, Z52, Z53, Z54, Z54se, Z82, Z700, Z703, Z705, Z706, Z708, Z715, F4270, P700, P704, P706, P707, P3120, P3140, P3150. Optracolor: 40, 45. Medley: 4c, 4x, 4sx. Execjet: II, IIC. OKI: 2010.

Compaq SmartJet: C20, IJ200, IJ600, 300, 600, 700, 900, 1200, Xerox: 365, 365c, 470, 470cx, 480cx, 490, 570, 155C, XJ8C, XJ9C, Xk35, XK-35c, XK-50, XK-50cx, C20, CW470, NC-20, XI-470.

Canon 710, Brother: 810, 840 BT: 50, 55, 60, 65, 300 SharpWinWrite: 100, 150C, Samsung.

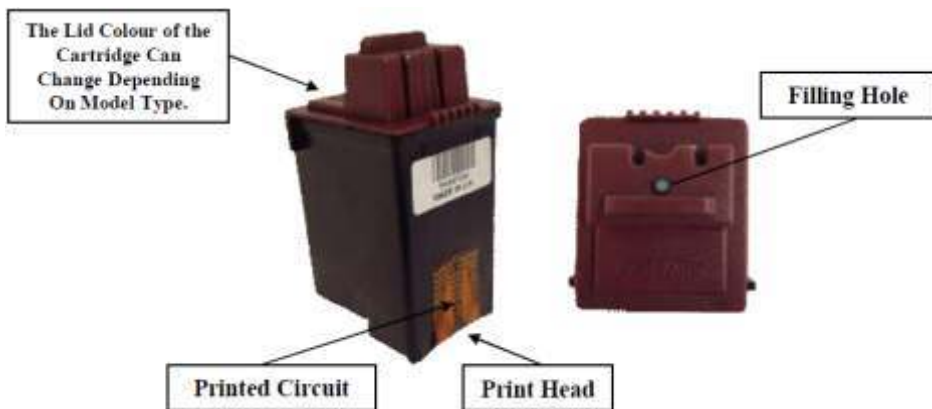

1. Enlarge the filling hole sufficiently to accept the steel filling tube using the screw provided. (See diagram above). **IMPORTANT: DO NOT REMOVE TOP.**
2. Fill syringe with ink, insert the steel filling tube into the filling hole and push downwards into the centre of the sponge.
3. **SLOWLY** inject ink, when the ink overflows from filling hole cartridge is full. Stop injecting ink immediately. **DO NOT** reseal filling hole. **IMPORTANT: Clean syringe with water and dry.**
4. Leave cartridge to stand overnight on a protective, non-absorbent surface, this will ensure no leakage and give the ink time to fully saturate the sponge. **IMPORTANT: DO NOT LEAVE ON TISSUE.**
5. Install cartridge and run a priming cycle. (When installing the cartridge the printer may ask if the cartridge is **NEW** or **OLD** cartridge. click on **NEW** to reset the printer) **IMPORTANT: For best results, refill whilst ink still remains in cartridge. Empty cartridges should be refilled immediately.**