

Refill Instructions - Lexmark No.32 (18c0032)

Printers

Lexmark P315, P915, P4350, P6200, P6250
X2350, X2510, X2530, X2550, X3330,
X3350, X3530, X4300, X5070, X5200,
X5250, X5260, X5270, X5410, X5450,
X5470, X5490, X7170, X7350, X8350.
Z800, Z810, Z815, Z816, Z818, Z845,
Z1300, Z1310, Z1320, Z1420

Dell 1100, A922, A924, A942, A960 & A962

Items Required

Original Lexmark No.32 Cartridge, Syringe & Filling
Tube, Drill Bit, Black Ink 10ml

Instructions

Note : Some cartridges will not have the holes on
the top of the cartridge. If this is the case then use
the drill bit to make a hole in the top at the points
shown on the diagram

1. Peel back the label from the top of the cartridge
IMPORTANT - DO NOT REMOVE TOP.
2. Fill syringe with ink, insert the steel filling tube
into the filling holes and push downward, into the
centre of the sponge. **SLOWLY** inject ink, when
the ink bleeds from filling holes, cartridge is full.
Stop injecting ink immediately.
3. Seal filling holes with adhesive tape.
4. Leave cartridge to stand overnight on a
protective, non-absorbent surface, this will ensure
no leakage and give the ink time to fully saturate
the sponge.
IMPORTANT - DO NOT LEAVE ON TISSUE.
5. Install cartridge and run a priming cycle.

IMPORTANT: For best results, refill whilst ink still
remains in the cartridge. Empty cartridges left for
more than a week do not always give a successful
re-fill.

ORDER REFILLS @ www.refill4.com



Lexmark 32 & 34

Black Refilling
Holes



Printhead

Note:

Lexmark have released some cartridges
(23, 24, 28 & 29) that can NOT be refilled.
They look identical to the cartridges
above but the electronics will stop the
printer recognising them.