

# Refill Instructions - HP C9351A (No.21)

HP	1400
DeskJet	3940, D1360, F380
PSC	1400, 1401, 1402, 1410



## Items Required

Original HP 21 Cartridge, Syringe & Filling Tube  
Black Ink 20ml

1. The filler holes are located under the label on top of the cartridge (fig.1)
2. Remove the label from the cartridge (fig.2)
3. Assemble syringe and steel filling tube and fill with black ink
4. Insert the steel filling tube into the appropriate filling holes. Push down into centre of the sponge.  
**IMPORTANT:** Cartridge contains a sponge and a slight resistant may be felt.
5. **SLOWLY** Inject ink. When ink overflows from filling hole or starts to leak from print heads cartridge is full. Stop injecting immediately.
6. After refilling replace label back over filling holes
7. Leave the cartridge to stand overnight on non-absorbent surface this will ensure no leakage and give the ink time to fully saturate the sponge.

**IMPORTANT: DO NOT LEAVE ON TISSUE.**

8. Install cartridge and run a priming cycle.

**IMPORTANT:** For best results, refill whilst ink still remains in cartridge. Empty cartridges should be refilled immediately.

fig.1

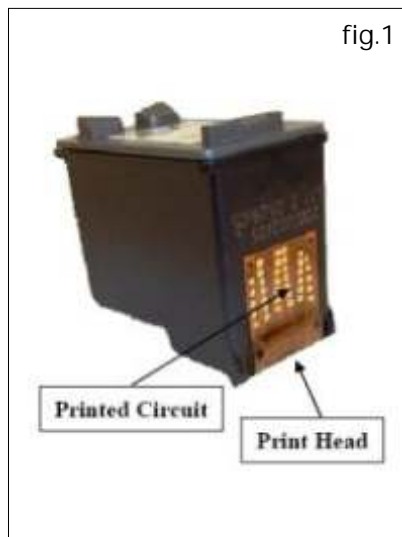


fig.2

